

# Besavior Receiver Instruction

## Contents:

### I. Product introduction

### II. Use of NS console

### III. Use of PC

### IV. Updating of firmware

### I. Product introduction

Besavior Receiver can use the PS5 joypad on Switch/Switch Lite/PC console with bluetooth.


#### bluetooth Connection

Indicator status

The indicator light is off: not paired

Green Light blinking: Pairing

The Green indicator light is always on: the pairing is successful

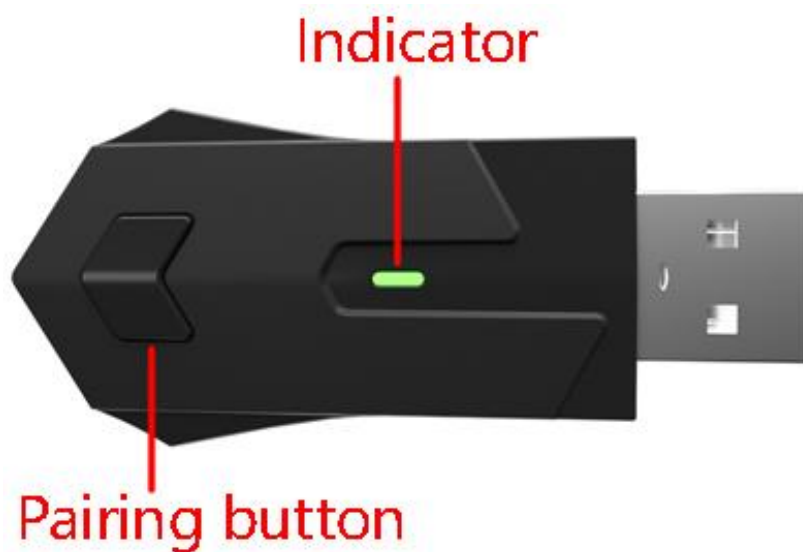

## II. Use of NS console

Behavior Receiver can use the PS5 joystick on Switch console/Switch lite console and is plug-and-play.

### Before the use:


1. Please enter NS console "setting" - "joypad and sensor" - " wired connection of Pro joystick", and set the wired connection of Pro joystick to be on



2. Enter NS console "setting" - "joypad and sensor" - "disconnected to the joystick" (as shown in the following image)



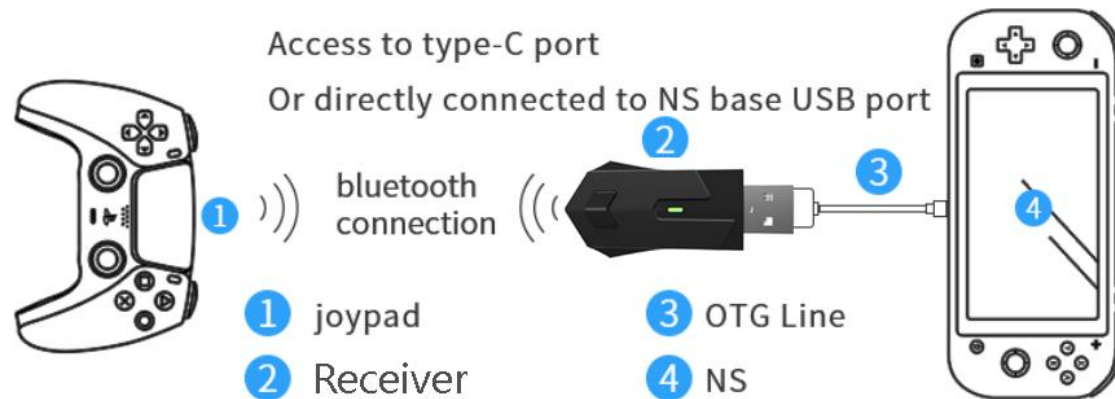

## bluetooth Connection



1. Enter the "joypad"- "Change Grip/Sequence" interface of the N-Switch console.
2. Insert the Besavior Receiver into the TYPE-C interface (charging port) of the N-Switch console through the OTG line conversion according to the schematic diagram.Or plug into the USB port of the N-Switch base, at this time the Besavior Receiver green indicator flashes and it is in the bluetooth pairing state.
3. . Press the joypad pairing button (refer to the joypad pairing description) until the joypad enters the bluetooth searching status.
4. Wait for about 3-5 seconds, the joypad indicator is always on, and the Besavior Receiver green indicator is always on. At this time, the bluetooth pairing connection is successful, and the N-Switch console can be controlled normally.

※ If the connection and pairing is unsuccessful, the green indicator light of the Besavior Receiver will go out, and you need to manually press the bluetooth pairing button of the Besavior Receiver and repeat the above steps.

### Pairing description of the joypad

bluetooth pairing of the PS5 joypad: long press the button "  +  ", and the joypad indicator light double flashes.

-----

### III. PC console use



1. Enter the "Control Panel"->"Devices and Printers" of the Windows system.
2. Insert the Besavior Receiver into the USB port of the PC console according to the schematic diagram, and the Wireless controller icon appears on the "Device and Printer" interface of the Windows system.
3. Make sure the Besavior Receiver green indicator flashes and it is in bluetooth pairing status.
4. Press the joypad pairing button (refer to the joypad pairing description) until the joypad enters the bluetooth searching status.
5. Wait for about 3-5 seconds, joypad indicator is always on, and the Besavior Receiver green indicator is always on. At this time, the bluetooth pairing connection is successful.
6. Right-click the Wireless controller icon on the "Devices and Printers" interface, and select "Game Controller Settings"->"Wireless controller "->"Properties".
7. At this time, it will jump to the joypad button test interface to test the joypad buttons.

※ If the connection and pairing is unsuccessful, the green indicator light of the Besavior Receiver will go out, and you need to manually press the bluetooth pairing button of the Besavior Receiver and repeat the above steps.

---

### IV.. Firmware updating

1. Go to the official website [forum.beload.com](http://forum.beload.com), and download receiver update firmware from besavior discussion board.
  2. Press and hold the bluetooth pairing button of the Besavior Receiver, insert the Besavior Receiver into the USB port of the computer, and the Besavior Receiver upgrade disk come out.
  3. Copy and Paste the update firmware into the upgrade disk.
-