

Beloader HID Update/Config Instruction

please unzip this file first, otherwise can't download correctly

This HID update is new way to update and config the beloader. It fix problem which some beloader user get update/config problem before. The step is:

No.1 Step: Upgrade the Beloader HID firmware 20220921.1940

A: Hold pair button and insert beloader into PC, use old way to update this

HID firmware 20220914.2254 .

B: After update HID firmware 20220914.2254 successfully, unplug beloader,

And insert into PC directly(**don't hold pair button**), the light should turn into green.

C: Enter update mode again(hold pair button and insert PC), uninstall super

manager driver if installed before, [here is the way](#). Maybe need uninstall few times to besure uninstall successfully.

User can ignore this step first, if can' t connect with HID, then do this C step

No.2 Step: Upgrade Beloader to Normal firmware like WIFI or LAN firmware

A: Hold pair button and insert beloader into PC, open index.html with **Microsoft Edge** browser.



User should enter following page:

Beloader HID Update

Connect Beloader Hid Device

Version: Version:0000202209142254

Config Set

Wifi SSID: XXXXXX6

Wifi PASSWD: VVVVVV34

Remoteplay PSNID: XXXXXXXX

Remoteplay PIN: XXXXXXXX

Paired:

Save


Firmware Update

选择文件 update.bin

Update

B: Click , then choose Beloader and connect it .

file:// 想要连接到 HID 设备

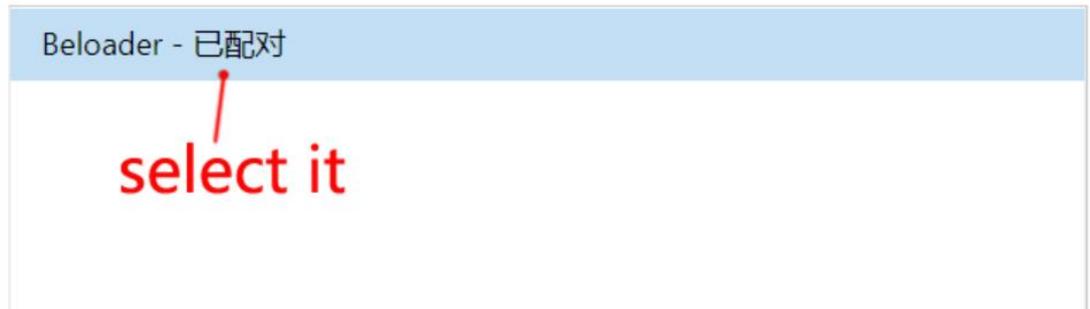

click connect —

C: Update Beloader to normal firmware like WIFI or Lan firmware. Just [download those firmware](#) and unzip it.



D: After update normal firmware successfully, unplug beloader, and enter into update mode again(hold pair button and insert PC), and **Repeat Step B**

No.3 Step: Config the beloader

Just input all details by hand which beloader require.

Beloader HID Update

Connect Beloader Hid Device Click here to connect beloader

Version: You can find firmware version here

Config Set

Wifi SSID: Input your 2.4G WIFI name
(If lan , just write fake name like 1)

Wifi PASSWD: Input your 2.4G WIFI password
(If lan , just write fake name like 1)

Remoteplay PSNID: Input your PSN ID, user can get it with PSN ACCOUT TOOL

Remoteplay PIN: Input the 8 digital on PS5 screen
don't close this screen till beloader connected successfully

Paired:

Click save after fill all

Firmware Update

update.bin

After update and config successfully, just power on beloader to work like before.

PS:

- 1: [Uninstall super manager driver way](#) here, user can uninstall few times to be sure uninstall successfully.
- 2: User can download [HID firmware](#) here
- 3: User can download [normal WIFI and Lan firmware](#) here
- 4: User can download [PSN ACCOUNT TOOL](#) here, to get PSN ID
- 5: This HID way is only for **beloader first generation** at present, we will

update beloader pro with this HID way later.