

For old Beloader Pro version users, please follow the steps below:

1: Use **Super Manager 1.4** to upgrade the firmware **Beloader Pro 20230310.1200**

2: After the upgrade is successful, remove the Beloader Pro, and then plug it into the PC (do not press the upgrade button) , after 5 seconds, then unplug.

3: **Download HID Manager 2.0** , unzip and run it.



4: Beloader Pro enter the update mode(hold update button and insert), then you can use HID Manager 2.0 to update and config.

5: Remove Beloader Pro, and use it normally.

Please refer to [the video](#) for the steps to connect Cronus Zen. The Zen set should:

